



Installation:

To install LED light, first install the Inlet Fitting Assembly which includes the Inlet fitting, (2) Inlet Plates, Back Nut and Faceplate.

On the pool interior, align one Inlet Plate over pre-cut hole. Insert Inlet fitting through Inlet Plate and pre-cut hole. On the pool exterior, slide the second Inlet Plate over the exposed threads of Inlet Fitting and then thread the Back Nut onto the fitting. Do not overtighten.

After the liner is installed, attach Faceplate as shown in Pool Installation Manual. Feed light cord through assembled return fitting. Securely screw light into fitting.

Winterize:

To winterize light in Metric pools, it is our recommendation that you the remove lens cap from light to prevent ice from catching and causing damage.