

INGROUND: PAVER COPING INSTALL

Wall Clips and Coping


Paver coping installation must start with Radiant Nassau wall clips. They provide a hard surface on the top of the wall to attach the coping to. Paver coping is notched to accommodate standard radii.

Place Nassau clips on the wall every 12". Do not Tek screw to the wall yet as final placement will vary with coping length.

Place Paver coping lengths on wall panel with a Nassau wall clip centered at the beginning and end of the length. Secure the wall clips to the panels and the coping to the wall clips with Tek screws on the exterior side of pool.

The next length is placed adjacent to the end of the first length, continuing around the pool. It is not necessary to leave spacing as with the white plastic coping. If you are installing a walk-in step, start at the step and continue around the pool, cutting the last length to fit.

Important: When all lengths are installed, apply a barrier between the bottom of the coping and the top of the pool wall to prevent sand and debris from getting in behind the liner. Silicone, foam sealant or duct tape can be used.

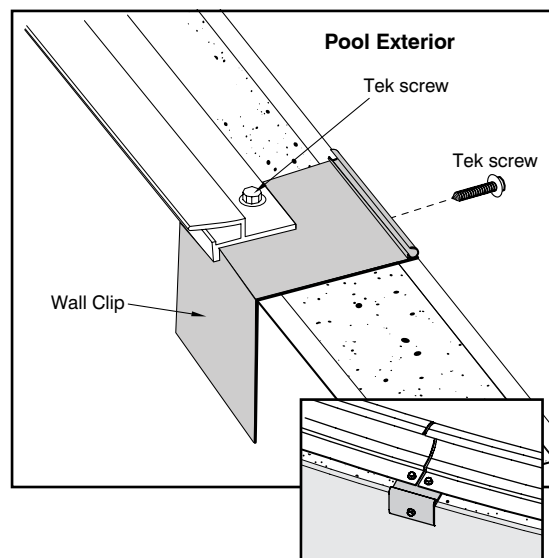

Transition with Mixed Coping

End caps are available for installation of Radiant Concrete Receptor (RCR) Coping and Metric plastic coping combination. The end cap provides a clean finish to the concrete and fits inside the RCR coping before the lower profile of the Standard 2" or Premium 4" coping starts.

