



Double Track Paver coping is installed the same way as standard single track paver coping is installed.

Installation must start with Radiant Nassau wall clips. Place wall clips on the wall every 12" with the clip ridge on the exterior side of the pool. **(fig. A)** Do not Tek screw to the wall yet as final placement will vary with coping length.

Place Paver coping lengths on wall panel making sure each joint between coping lengths is centered over a Nassau wall clip. Secure the wall clips to the panels on the exterior side of pool. Secure the coping to the wall clips with Tek screws **(fig. B)** Repeat this for the adjacent lengths of coping. You will end up with two #12 TEK screws at each coping joint.

The next length is placed adjacent to the end of the first length, continuing around the pool. If you are installing a walk-in step, start at the step and continue around the pool, cutting the last length to fit. See image below to determine the proper position of wall and coping to step for your installation. **(fig. C)**

When all lengths are installed, apply a barrier between the bottom of the coping and the top of the pool wall to prevent sand and debris from getting in behind the liner. Silicone, foam sealant or duct tape can be used.

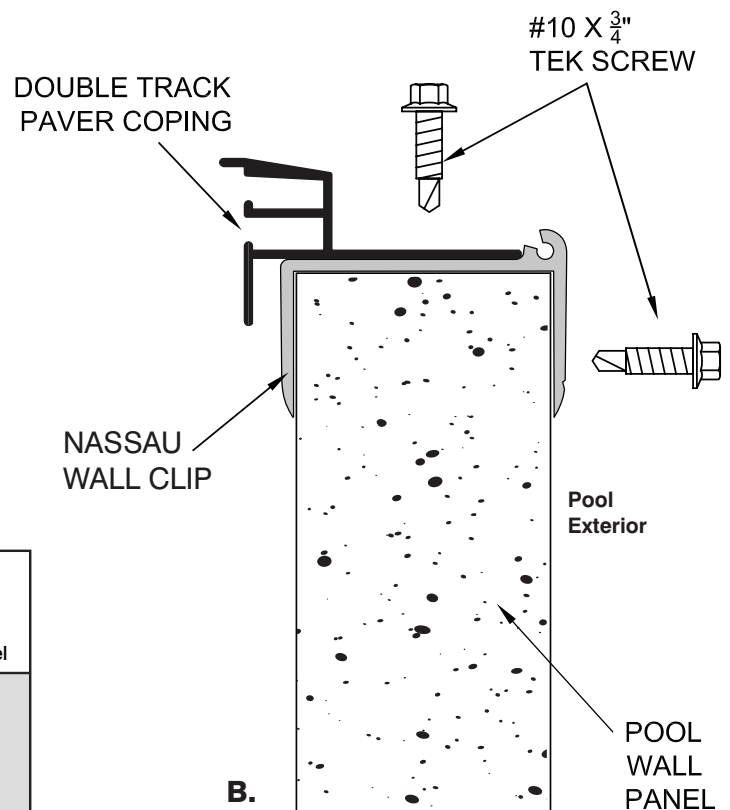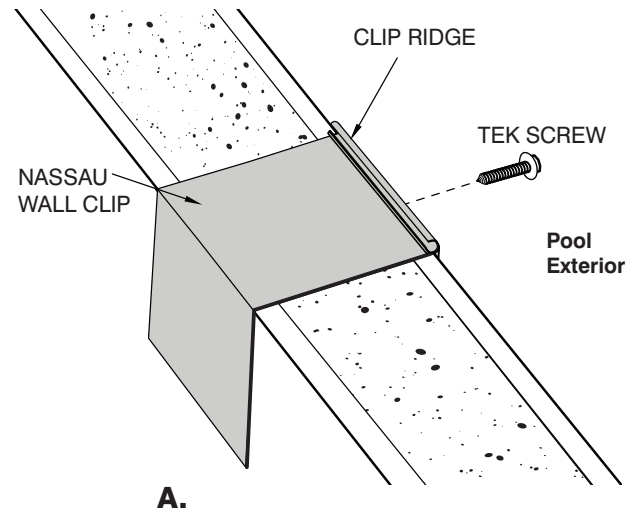

C. Cantilever Step with Double Track Paver Coping

