



Radiant Concrete Receptor Coping

Installation Instructions

Radiant Concrete Receptor Coping (RCR) installation must start with Radiant Nassau wall clips. They provide a hard surface on the top of the wall on which to attach the coping. RCR Coping is notched to accommodate standard radii. (Pre-formed 6" radius and Grecian Corners are available)

Place Nassau Clips on the wall every 12". Do not Tek screw to the wall yet as final placement will vary with coping length.

Place RCR coping on wall panel with a Nassau wall clip centered at the beginning and end of the length. To bend notched coping, slowly pull the coping to the desired radius as you work your way down the bar. Begin securing one end of the coping with Tek screws, Nassau Wall Clip, Support Anchors and Coping Clips where needed. Use a white rubber mallet to aid in forming the coping to the final radius as you work your way down the bar. Once the desired final radius is met, secure Nassau wall clips to the pool wall and the coping to the wall clips every 12" and Support Anchors every 2 1/2' - 3'.

RCR Coping	Support Anchor	Coping Clip	Nassau Clip
Part # 3324-N (notched) 3324-S (straight)	Part # 3324-A	Part # 3324-C	Part # 1712

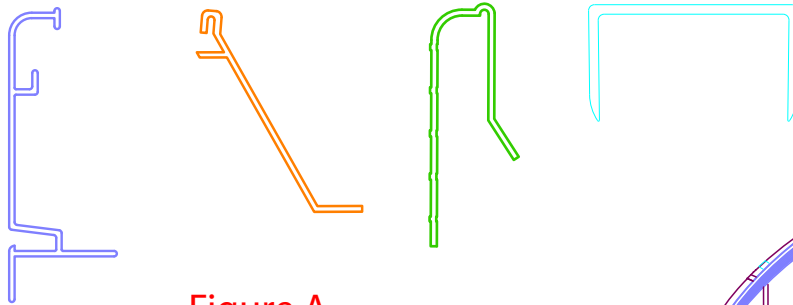


Figure A.

Figure B.
Covering Coping Seams



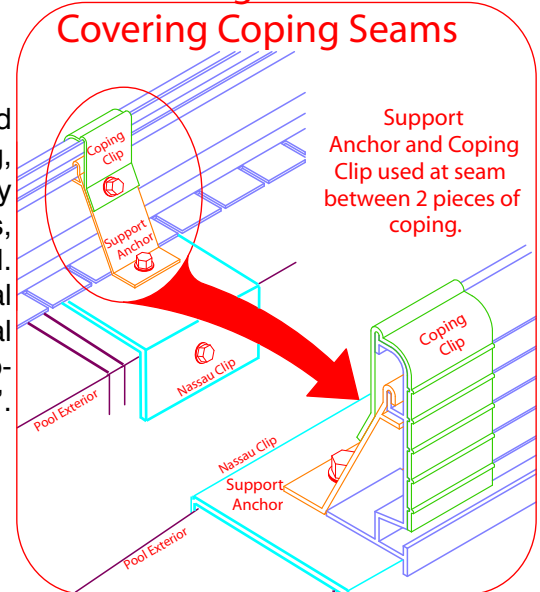


Figure B

**Coping Clip
(at seams)**

Figure A.

Coping Fastened to Panels

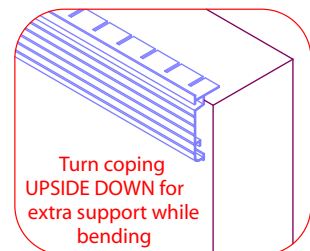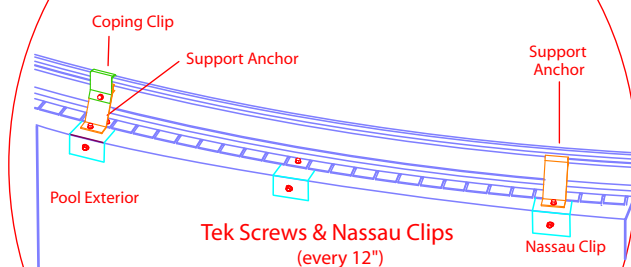

Optional Method

(can be used on wall sections with a single radius to form. For compound radius sections this method may NOT work)